



**1854682 Queen Wingback Bed**  
**1854695 King Wingback Bed**

**Parts and Hardware List**

A.	Side Rails with Attachment Hooks	2 pcs
B.	Foot Rail	1 pc
C.	Head Rail	1 pc
D.	Center Support Slat	1 pc
E.	Leg Supports	3 pcs
F.	Support Slats	4 pcs
G.	Flat Washers	8 pcs
H.	Lock Washers	8 pcs
I.	Allen Head Bolts	8 pcs
J.	Allen Head Wrench	1 pc
K.	Pan Head Phillips Head Wood Screws	8 pcs
L.	Flat Head Phillips Head Wood Screws	6 pcs
M.	Phillips Head Screwdriver	1 pc
N.	Spanner	1 pc
O.	Upholstered Headboard	1 pc
P.	Feet	4 pcs


- \* Please make sure that you have all the parts and hardware indicated before you begin assembly of this item.
- \* Use the hardware illustrations to determine correct piece and size.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening




**1854682 Queen Wingback Bed**

**1854695 King Wingback Bed**


**Hardware Illustrations**

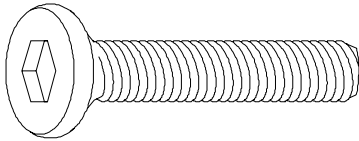

I. Allen Head Bolt




G. Flat Washer



L. Flat Head Phillips Head Wood Screw



H. Lock Washer



K. Pan Head Phillips Head Wood Screw




**1854682 Queen Wingback Bed**  
**1854695 King Wingback Bed**

**Attach Side Rails to Head and Foot Rails**

**Parts required**

A. Side Rails	2 pcs	L. Flat Head Phillips Head Wood Screws	6 pcs
B. Foot Rail	1 pc	M. Phillips Head Screwdriver	1 pc
C. Head Rail	1 pc	N. Spanner	1 pc

1. **Attach Side Rails (A) to Foot Rail (B)** Insert the metal hooks of the Side Rail (A) into the slot in the Foot Rail (B) with the wood cleats facing inward. Secure with three Flat Head Phillips Head Wood Screws (L) using the Phillips Head Screwdriver (M). Repeat to attach the remaining Side Rail (A).
2. **Attach Side Rails (A) to Head Rail (C)** Attach the metal bracket with hook on the Side Rail (A) to two Phillips Head Bolts on the metal piece of the Head Rail (C). Secure by tightening the two bolts with Spanner (N). Repeat to attach the other Side Rail (A) to Head Rail (C). See illustration #1.

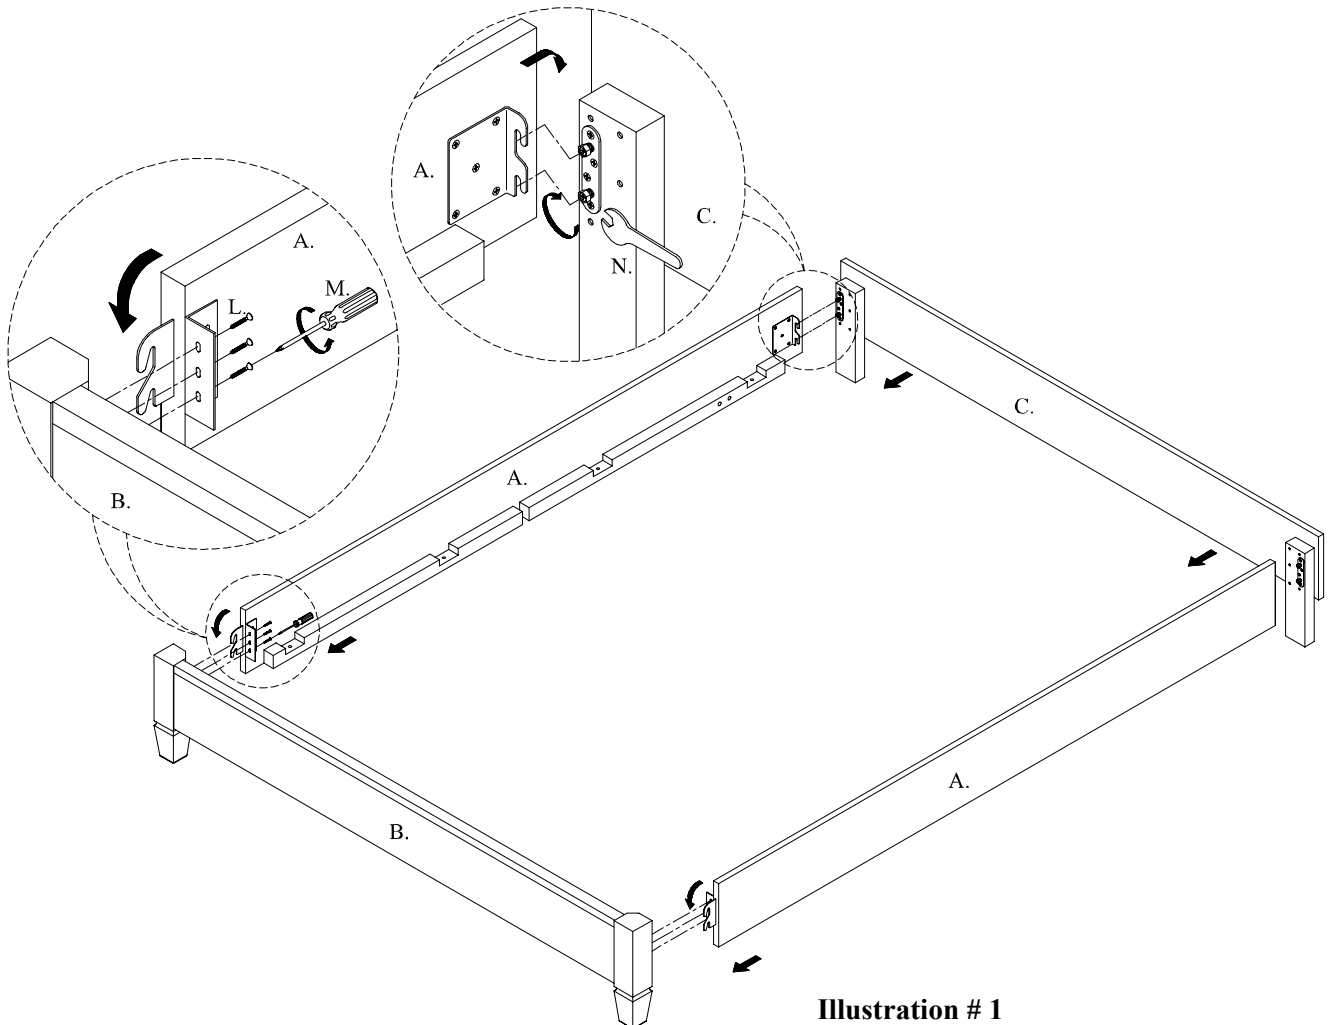

**Illustration # 1**



**1854682 Queen Wingback Bed**


**1854695 King Wingback Bed**

**Attach Leg Supports to Center Support Slat**

**Parts required**

D. Center Support Slat	1 pcs	E. Leg Supports	3 pcs
------------------------	-------	-----------------	-------

3. **Attach Leg Supports (E) to Center Support Slat (D)** Ensure that the side of the Center Support Slat (D) with the 'TOP' label sticker faces upward. Insert the exposed threads of the Leg Supports (E) into the pre-threaded holes underneath the Center Support Slat (D). Secure by turning in a counterclockwise direction. See illustration #2.

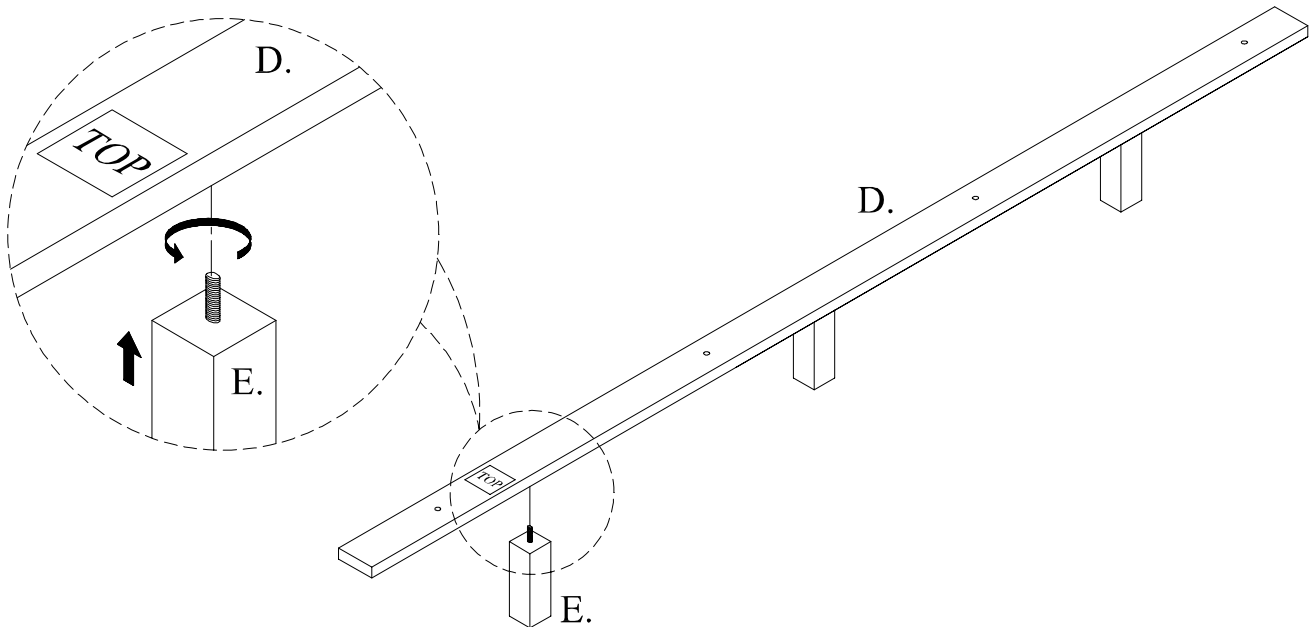

**Illustration # 2**




## 1854682 Queen Wingback Bed 1854695 King Wingback Bed

### Attach Support Slats to Bed Frame

#### Parts required

D. Center Support Slat	1 pc	J. Allen Head Wrench	1 pc
F. Support Slat	4 pcs	K. Pan Head Phillips Head Wood Screws	8 pcs
G. Flat Washer	4 pcs	M. Phillips Head Screwdriver	1 pc
H. Lock Washer	4 pcs	O. Upholstered Headboard	1 pc
I. Allen Head Bolt	4 pcs		

4. **Attach Support Slats (F) to Center Support Slat (D)** Ensure that the side of the Support Slat (F) with a bigger hole opening in the center of the slat faces upward. Align the center hole of the Support Slats (F) with the pre-threaded holes on the Center Support Slat (D). Secure with Flat Washers (G), Lock Washers (H) and Allen Head Bolts (I) using the Allen Head Wrench (J).
5. **Attach Support Slats (F) to Side Rails (A)** Place the ends of the Support Slats (F) into the pre-cut slots in the cleats of the Side Rail (A). Secure with Pan Head Phillips Head Wood Screws (K) using the Phillips Head Screwdriver (M). See illustration #3.

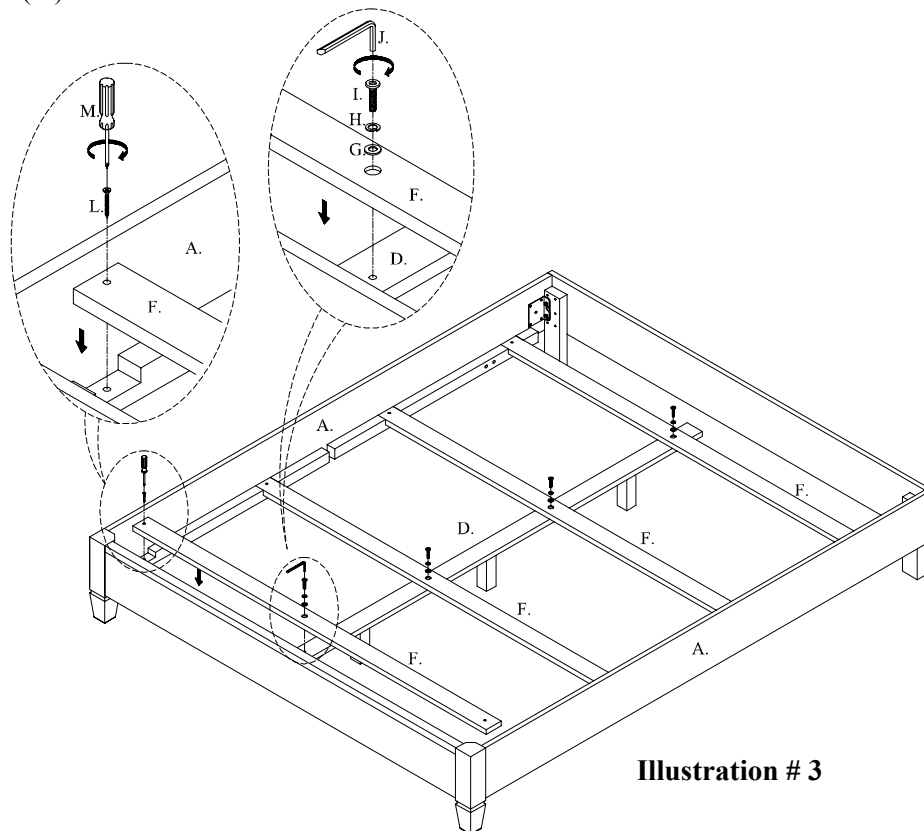

**Illustration # 3**




**1854682 Queen Wingback Bed**  
**1854695 King Wingback Bed**

**Attach Feet to Upholstered Headboard**

**Parts required**

O. Upholstered Headboard	1 pc	P. Feet	4 pcs
--------------------------	------	---------	-------

6. **Attach Feet (P) to Upholstered Headboard (O)** Lay the Upholstered Headboard (O) on its back. Insert the exposed threads of the Feet into the pre-threaded holes at the bottom of the Upholstered Headboard (O). Tighten by turning in a clockwise direction. See illustration #4.

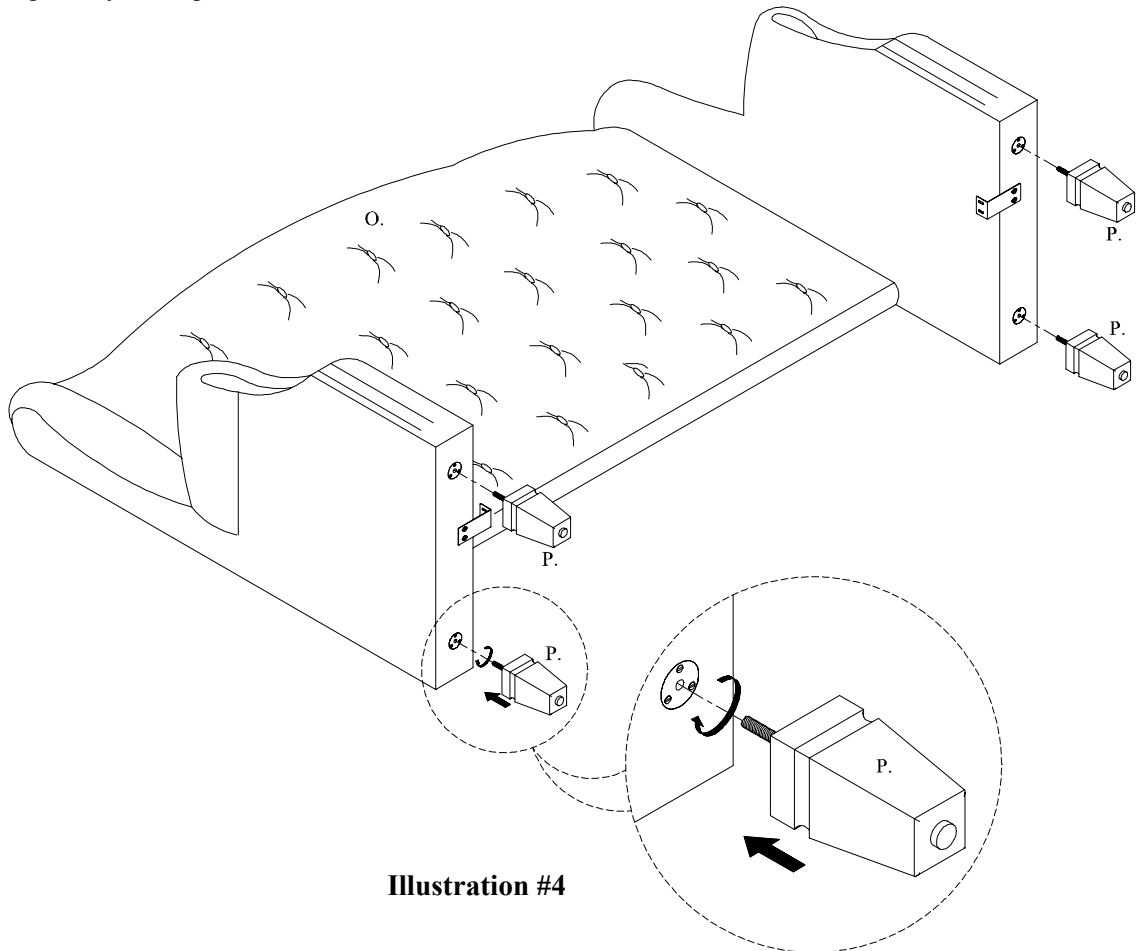

**Illustration #4**



## 1854682 Queen Wingback Bed

## 1854695 King Wingback Bed

### Attach Bed Frame to Upholstered Headboard

#### Parts required

G. Flat Washers	4 pcs	J. Allen Head Wrench	1 pc
H. Lock Washers	4 pcs	O. Upholstered Headboard	1 pc
I. Allen Head Bolts	4 pcs		

7. **Adjust Metal Bracket on Upholstered Headboard (O)** Slightly loosen the two pre-attached Allen Head Bolts on the Metal Brackets near the Feet (P) by turning in a counterclockwise direction using the Allen Head Wrench (J). **Note: Do not loosen the bolts completely.** Pull the Metal Bracket inward.
8. **Attach Bed Frame to Upholstered Headboard (O)** Turn the Upholstered Headboard (O) upright. Push the Bed Frame towards the Upholstered Headboard (O). Lift the Side Rails (A) and place over the Metal Brackets. Make sure the pre-threaded holes on the cleat of the Side Rails (A) are aligned with the pre-drilled holes on the Metal Brackets. **Ensure the upholstered wing and side rail that are placed side by side are pushed as close together as possible.** Push the Metal Brackets and Side Rails (A) towards the upholstered wing of the Headboard. Secure with Flat Washers (G), Lock Washers (H) and Allen Head Bolts (I) using the Allen Head Wrench (J) by turning in a clockwise direction. Tighten the Allen Head Bolts of the Metal Bracket on the underside of the headboard using the Allen Head Wrench (J) by turning in a clockwise direction. See illustration #5.

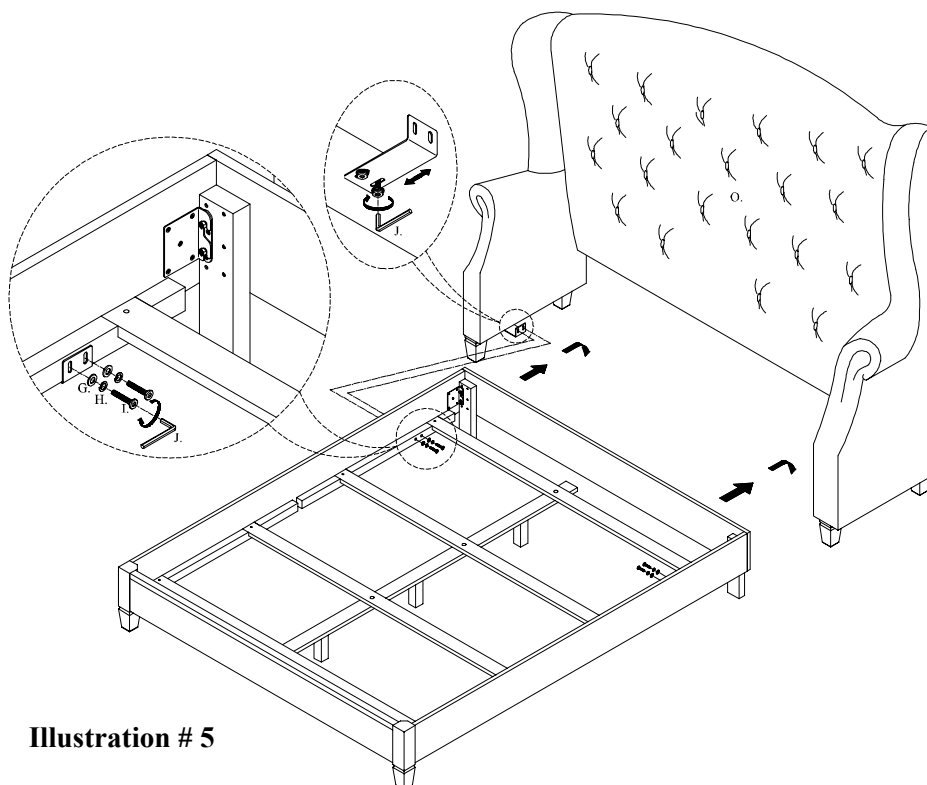


Illustration # 5